

ID 124_UK	Rev. 01	Date 24/11/09	Enviroline[®] 124	Page 1 of 12
--------------	------------	------------------	-----------------------------------	--------------

Enviroline[®] 124 Application Guidelines

Prepared by:

International Paint Ltd.

www.international-pc.com

TECHNICAL AND APPLICATION DATA herein is for the purpose of establishing a general guideline of the coating and proper coating application procedure. Test performance results were obtained in a controlled laboratory environment and International makes no representation that the exhibited published test results, or any other tests, accurately represent results actually found in all field environments. As application, environmental and design factors can vary significantly, due care should be exercised in the selection, verification of performance, and use of the coating(s).

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Enviroline® 124	Page 2 of 12
--------------	------------	------------------	------------------------	--------------

SCOPE AND PURPOSE

The International Paint Application Guidelines have been produced and revised in line with the Worldwide Protective Coatings Product Range. The purpose of the guidelines is to ensure that a lining system, as applied, provides adequate protection against corrosion.

Successful in-service performance of a lining system depends upon both the correct choice of lining and the adoption of the correct guidelines for surface preparation and paint application.

The responsibilities for achieving the specific standards outlined, and for carrying out surface preparation and paint application, rest with the Contracting Company. Under no circumstances do these responsibilities rest with International Paint. We will generally provide for the presence of a Technical Service Representative at key stages during the performance of the contract. The role of the International Paint Technical Service Representative is advisory only unless otherwise specified in the terms and conditions of the contract. The information contained herein presents guidelines for the application of Enviroline 124 to both new and existing steel and/or concrete

CONTENTS

1. LINING SPECIFICATION
2. ENVIRONMENTAL CONDITIONS FOR APPLICATION
3. APPLICATION PROCEDURE
4. APPLICATION METHOD
5. TECHNICAL INSPECTION AND PROJECT CONTROL
6. GENERAL NOTES
 - 6.1. Steel Condition
 - 6.2. Steelwork Preparation
 - 6.3. Ventilation
 - 6.4. Heating
 - 6.5. Lighting
 - 6.6. Storage of Product at Point of Application
 - 6.7. Weather Shelters
 - 6.8. Abrasive Grit Blasting
 - 6.9. Cleaning
 - 6.10. Mixing
7. REPAIR PROCEDURE
8. HEALTH & SAFETY

APPENDIX – FABRICATION RECTIFICATION

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Enviroline® 124	Page 3 of 12
--------------	------------	------------------	------------------------	--------------

1. LINING SPECIFICATION

1.1 Surface Preparation

In common with most protective coatings schemes, the performance level of Enviroline 124 is ultimately determined by degree of surface preparation. The higher the degree of surface preparation achieved, the greater the long-term performance. For optimum performance, all surfaces to be coated should be clean, dry and free from contamination including dirt, salts, oil and grease.

Steel

Prior to paint application all surfaces should be assessed and treated in accordance with ISO 8504:2000. Where necessary, remove weld spatter and smooth weld seams and sharp edges (see Appendix 1). In cases where the substrate is corroded or pitted, it may be necessary to fresh water wash the areas after abrasive blasting, then re-blast, in order to ensure complete removal of soluble corrosion products.

The maximum allowed total soluble salt contamination on the steel before application of the Enviroline 124 is $5\mu\text{g}/\text{cm}^2$. Acceptable levels of soluble salts are

- Chlorides : Less than $3\mu\text{g}/\text{cm}^2$
- Sulphates : Less than or equal to $5\mu\text{g}/\text{cm}^2$
- Nitrates : Less than or equal to $5\mu\text{g}/\text{cm}^2$

The total of all 3 soluble salt types must not exceed $10\mu\text{g}/\text{cm}^2$

See section 3 for more details regarding measurement.

All steel surfaces to be coated should be correctly prepared prior to application of the coating system.

Abrasive grit blast the steel to be coated to a minimum of ISO Standard 8501-1 (2007) Sa2½ or SSPC SP10. A sharp and angular surface profile of between 75 and 125 microns (3-5mils) is required. In certain aggressive service conditions, it may be required to blast to Sa3 or SSPC SP5. Contact International Protective Coatings for specific advice.

1.2 Typical Specification

<u>Coat</u>	<u>Product</u>	<u>Dft (microns)</u>		<u>Dft (mils)</u>			
		Spec	Min (1000)	Max (2000)	Spec	Min (40)	Max (80)
Full	Enviroline 124	1500			60		

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Envioline® 124	Page 4 of 12
--------------	------------	------------------	-----------------------	--------------

1.3 Notes

The detailed project coating specification provided by International Protective Coatings must be followed at all times. This will include specific details with regard to surface preparation and dry film thickness requirements.

Specific project requirements will be dependent upon the service end use and operating conditions of the tank or vessel. Always consult International Protective Coatings to confirm that Envioline 124 is suitable for contact with the product to be stored.

Refer to the Envioline 124 datasheet for precise overcoating intervals, pot life and curing requirements.

2. ENVIRONMENTAL CONDITIONS FOR APPLICATION

Envioline 124 will not cure at ambient temperatures below -7°C (21°F). For maximum performance, the temperature should be greater than 21°C (70°F). Humidity control is required during application of Envioline 124. The climatic conditions should be controlled to maintain a maximum relative humidity of 80% and a minimum temperature of -7°C (21°F). Maximum steel temperature should be no more than 49°C (120°F).

Application should not take place when relative humidity is more than 80% or the surface temperature is less than 3°C (5°F) above the dew point.

For higher temperatures, for example those found in the Middle East and tropical areas consult your regional International Paint Technical Department. Envioline 124 is also available in Fast and Slow curing versions with differing curing times; see the Product Data Sheet for further information.

3. APPLICATION PROCEDURE

Defective steelwork, prior to contract commencement, should be repaired in line with the guidance notes given in the Appendix of this document.

Microclimate should be monitored in between applications. Changes in microclimate may affect overcoating intervals.

For steel surfaces, grit blast the steel to be coated to a minimum of ISO Standard 8501-1 (2007) Sa2½ or SSPC SP10. A sharp and angular surface profile of between 75 and 125 microns (3-5mils) is required. In certain aggressive service conditions, it may be required to blast to Sa3 or SSPC SP5. Contact International Protective Coatings for specific advice.

Upon completion of the surface preparation process, and following inspection by the Contractor Quality Control Department, an International Paint Technical Service Representative may also inspect the whole area and mark up any substandard areas if agreed as part of the contract.

Before coating of the blasted surfaces commences, the amount of residual salt should be measured using an appropriate method such as the Bresle Patch (ISO 8502-6), Chlor*Test CSN Salts test kit or similar. The number of tests to be carried out is dependent upon the size of the tank. If the residual salt level is greater than that agreed, the entire area to be coated should be fresh water washed and retested.

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Enviroline® 124	Page 5 of 12
--------------	------------	------------------	------------------------	--------------

All marked areas shall be brought up to the required standard. The whole blasted area is to be blown down/vacuum cleaned to remove all dust and contamination.

Ensure, prior to application, that the minimum environmental conditions specified in Section 2 are achieved. Provision should be made to ensure these conditions are maintained throughout the painting program.

All the areas are to receive a full coat of Enviroline 124 to the specified dry film thickness.

When fully hard dry, and accepted by the Contractor Quality Control Department, an International Paint Technical Service Representative may confirm the dry film thickness if agreed as part of the contract.

Any areas of under thickness are to be brought up to the minimum thickness specified. This must be carried out within the overcoating intervals specified for the product. If the overcoating interval has been exceeded then the area should be abraded and cleaned prior to application of touch up.

Unless otherwise advised, all damages are to be either vacublasted to Sa2½ (ISO 8501-1 (2007)) or SSPC SP10 or Power tool clean to SSPC SP11 with a profile of 75-100 microns (3 -4 mils). All damages are to be touched up with Enviroline 124 to the specified minimum dry film thickness as per the project specification.

Upon completion of installation, the final coating should be inspected using a suitable non-destructive magnetic gauge to verify average lining thickness. Holiday testing and Shore D hardness testing should also be carried out.

Following testing, any defective area should be repaired in accordance with the recommendations of the International Paint Technical Service Representative. These recommendations will be based upon those outlined in Section 7.

Ensure that fresh containers are used after each unit is sprayed – do not refill the old containers.

4. APPLICATION METHOD

Enviroline 124 can be applied by trowel (preferred), putty knife, spatula or stiff brush.

5. TECHNICAL INSPECTION

Project control via regular inspection and agreement on any future action is vital to a successful coating project, and in maximising the potential of a lining system.

All parties involved in the coating work must agree an inspection procedure prior to work commencing, this should outline how and when both work and inspection will be undertaken.

Prior to commencing the project, the contractor(s) must be provided with copies of the relevant product data sheets. Attention should be drawn to pack sizes, mix ratios, thinning restrictions, required application conditions etc.

Inspection equipment for measurement of profile depth, humidity, wet and dry film thickness, etc should be of suitable type and should be within calibration limits.

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Enviroline® 124	Page 6 of 12
--------------	------------	------------------	------------------------	--------------

NOTE: When measuring the dry film thickness of coatings, the d.f.t. gauge must be calibrated prior to use as follows:

1. Check that the probe is clean.
2. Place the probe on a sample of millscale-free smooth steel of thickness greater than 1mm.
3. Calibrate the instrument to zero.
4. Select a certified shim of similar thickness to that expected for the coating under test.
5. Calibrate the gauge to the shim thickness.
6. Check that the gauge reads zero when replaced on the smooth steel sample.

Measurement of dry film thickness is described in ISO Standard 2808:1991 - Method 6A. or SSPC PA2

Holiday testing should be carried out to ensure the coating is free from voids according to NACE SP0188-2006 High Voltage Spark Testing at a test voltage of 100 volts per 25µm (1 mil).

Hardness – Conduct a Shore D Hardness test in accordance to ASTM D2240-05 to verify that Enviroline 124 has cured to the appropriate hardness. Shore D Hardness readings should be a minimum of 75 to indicate full cure.

The fully cured lining system should be uniform in colour and gloss and be relatively free of any runs, sags, porosity, pinholes, fisheyes, soft spots and debris.

6. GENERAL NOTES

6.1 Steel Condition

Prior to commencement of gritblasting it is essential that the steel is clean, dry, and in a condition suitable for surface preparation and application of the coating scheme. All grease and oil must be removed from all surfaces and all hot work must be complete.

Defective steelwork, prior to contract commencement, should be repaired in line with the guidance notes given in Appendix 1.

6.2 Steelwork Preparation

Preparation grades of welds, cut edges and surface imperfections are described in ISO 8501-3. Preparation to P3 grade of this standard will provide surfaces which will ensure optimum paint performance. International Paint recommends the following methods and minimum levels of preparation on any new steelwork. Please see Appendix concerning rectification of fabrication faults.

6.3 Ventilation

During and after coating application the ventilation system and trunking must be so arranged such that “dead spaces” do not exist. As solvent vapours are heavier than air, and will tend to accumulate in the lower areas and it is important that they are extracted from those areas. The extracted air must be balanced with fresh air being introduced into the encapsulated area.

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Enviroline® 124	Page 7 of 12
--------------	------------	------------------	------------------------	--------------

Equipment used must not re-introduce abrasive dust, solvent vapour etc. into the area where the coated articles are stored.

The level of ventilation employed must take account of the Lower Explosive Limit (LEL) of the product being applied and comply with local legislative requirements. International Paint recommends that this is such that vapour concentrations do not exceed 10% of the LEL.

Venting to 10% of the LEL is considered to provide a reasonable margin of safety to allow for possible higher local concentrations. Care should be taken when setting up ventilation/extraction systems, to ensure that 10% figure is not exceeded.

Responsibility rests with the contractor to ensure that the requisite equipment is available and operated in such a way that these requirements are met. International Paint will provide all of the information needed to allow the contractor to calculate ventilation requirements. However, International Paint does not accept responsibility for the equipment, its operation, or the monitoring necessary to ensure that the requisite ventilation requirements are met.

All equipment used after the commencement of paint application must be electrically safe in operation.

6.4 Heating

If heating is necessary to satisfy the painting specification, it should be by means of a heat exchange system, i.e. air admitted to the encapsulated area should not pass directly through a combustion chamber.

6.5 Lighting

Lighting during painting must be electrically safe and provide suitable illumination for all work. As a general guide, lighting may be considered suitable if this text can be read at a distance of 30 centimeters from the eye.

Ideally, the lighting should be powerful mains supplied spotlight with background lighting on at all times in the interests of safety.

Powerful mains spotlighting must be provided when inspection work is being carried out.

6.6 Storage of materials (at point of application)

Provision must be made for heated storage of the Enviroline 124 to ensure a minimum temperature of 25°C (77°F) is achieved, with a maximum paint temperature of 38°C (100°F).

6.7 Weather Shelters

Weather shelters should be made available to cover application equipment during mixing and application of material. This should also prevent contamination from entering the area where application is underway.

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Enviroline® 124	Page 8 of 12
--------------	------------	------------------	------------------------	--------------

6.8 Abrasive Grit Blasting

The steel surface should be grit blasted to a minimum standard ISO 8501-1 (2007) Sa2½ or SSPC SP10. In certain aggressive service conditions, it may be required to blast to Sa3 or SSPC SP5. Contact International Protective Coatings for specific advice.

In cases where the substrate is corroded or pitted, it may be necessary to fresh water wash the areas after abrasive blasting, then re-blast, in order to ensure complete removal of soluble corrosion products.

The maximum allowed total soluble salt contamination on the steel before application of the Enviroline 124 scheme is 100g/m² (10µg/cm²)

Air used for blasting must be clean, oil free and dry. The pressure should be at least 7kgcm⁻² at the nozzle.

Abrasives used for blasting must be dry and free from dirt, oil, and grease and suitable for producing the standard of cleanliness and profile specified. The abrasive must therefore be in accordance with the specifications given in ISO 11126 - Parts 1 to 8 and each delivery should carry a certificate of conformity to this specification.

If blasting abrasive is supplied on site without a certificate of conformity, the material should be tested by the yard or contractor in accordance with the methods given in ISO 11127 - Parts 1 to 7.

Particular attention should be given to ISO 11127 - Part 6, where the level of water soluble contaminants must not give a conductivity value greater than 25mS/m, and ISO 11127 - Part 7, where the level of water soluble chlorides must not exceed 0.0025% by weight.

Iron or steel abrasives can be used for in-situ open blasting. Specifications for metallic abrasives are given in ISO 11124 - Parts 1 to 4 and the corresponding test methods in ISO 11125 - Parts 1 to 7. If used, careful and thorough cleaning must be carried out at all stages of the operation to ensure that no abrasive remains on the steel as this may subsequently corrode.

The required amplitude of the blast profile depends upon the type of coating to be applied. Measurement on site should be by profile gauge or other mutually agreed instruments.

Measurement of surface profile using comparators is described in ISO 8503-2 using comparators detailed in ISO 8503-1. A medium 'G' type comparator should be used and a value of 55-95 microns (2.2 to 3.8 mils) is acceptable when measured by:

ISO 8503-3: Focusing microscope

ISO 8503-4: Stylus

When using a needle gauge such as the Elcometer 123, a value of 75-100 microns (3 – 4 mils), taking a maximum of 10 determinations, is ideal.

6.9 Cleaning

Prior to initial blasting inspection, the bulk of spent grit should be removed.

Any substandard areas should be identified and should be brought up to the specified standard.

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Enviroline® 124	Page 9 of 12
--------------	------------	------------------	------------------------	--------------

Following provisional approval of the blast standard, ALL remaining traces of grit and dust should be removed from all areas.

Final approval of a substrate for coating application should be confirmed after final cleaning.

6.10 Mixing

Mix resin with hardener using wooden paddle until homogeneous color is achieved.

The material (Part A, Resin, and Part B, Hardener) should first be pre-mixed in its own container to ensure proper dispersion of contents. Scraping the sides and bottom of the container is required. The hardener component, Part B should then be combined with the resin component Part A. This can be carried out in the container provided as part of the standard Enviroline unit. The combined components should then be agitated until thoroughly mixed with one another, checking to see if the combined component color is uniform and complete.

7. REPAIR PROCEDURE

These repair guidelines are recommended for damages either at the initial coating stage or where breakdown of coating has occurred during service.

Minor Repairs

Under this heading are repairs to areas damaged either at the initial coating stage or caused during service. The principle requirements are:

The area to be repaired must be fresh water washed and dry.

Remove any corrosion by means of either:

- vacuum blasting (to achieve a minimum profile of 75µm, 3 mils)
- hand tools, i.e. disc sander and grinder to effectively roughen the coating surface

Any pitting which does not need re-welding should be prepared by needle gun and/or cone shaped grinder.

To repair an area brush blast, abrade (coarse grit), or grind the affected area to remove gloss and obtain a suitable surface roughness profile. Feather edges of repair site to achieve a smooth transition between repair and surrounding coating. Clean to remove any dust or debris prior to re-coating and solvent wipe with MEK. Allow solvent to evaporate. Apply Enviroline 124 depending upon the size of the affected area, to obtain the proper thickness or to cover any discontinuities.

Holiday testing should be carried out to ensure the coating is free from voids according to NACE SP0188-2006 High Voltage Spark Testing at a test voltage of 100 volts per 25µm (1 mil)

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Envioline® 124	Page 10 of 12
--------------	------------	------------------	-----------------------	---------------

8. HEALTH & SAFETY

8.1 Introduction

Whilst Envioline 124 is solvent free, this material may form an explosive mixture with air and additionally may contain materials which may necessitate personal protection against potential health hazards. A summary of the main precautions to be taken includes:-

Danger of explosion or fire
Provision of a suitable breathing environment for workers.
Prevention of skin irritation problems.
Use of paints which have been specially formulated for use in tanks.

8.2 Danger of Explosion or Fire

The key factors in preventing an explosion or fire are:

Adequate ventilation.
Elimination of naked flames, sparks and any ignition sources.

8.3 Ventilation

Ventilation is necessary during abrasive blasting operations to ensure adequate visibility. Flexible trunking should be used to allow the point of extraction to be reasonably close to the personnel carrying out the blasting.

During and after coating application it is essential that solvent vapours are removed to ensure that the level present in the atmosphere does not rise above that recommended in the section (6.2) dealing with "Danger of Explosion and Fire". This means that the ventilation system must be arranged such that "dead spaces" do not exist and the ventilation must be continued both during the time that application is proceeding and also whilst solvent is released from the paint film during the drying process. Particular care must be taken to ensure that solvent vapour, which is heavier than air, does not accumulate in the lower areas of the tanks.

The amount of air per minute for ventilating to 10% of the LEL (lower explosive limit) can be regarded as the required air quantity multiplied by rate of application per minute. The required air quantity is the amount of air needed for each litre of paint to ventilate to the required level.

RAQ = Required Air Quantity
LEL = Low Explosive Limit

International Paint should be contacted for RAQ and LEL values, which are also given on the Material Safety Data Sheets for the appropriate products.

Ventilation required (m³/minute) = RAQ x the application rate (litres/minute). The likely approximate application rate can be calculated from figures available from the application equipment supplier and will depend on the airless spray pump pressure and the orifice size of the tip used.

In the event of a failure of the extraction/ventilation system paint application must be stopped and the area evacuated of personnel immediately.

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Envioline® 124	Page 11 of 12
--------------	------------	------------------	-----------------------	---------------

8.4 Elimination of Ignition Sources

Safety is the overriding consideration with this type of coating work, and the Site Safety Department must be made fully aware of all aspects of the operation.

Welding, cutting or grinding in the immediate vicinity should be forbidden until paint fumes are totally dispersed. Lights, including hand torches, must be certified by the manufacturer as flash proof and suitable for use in solvent laden atmospheres.

Smoking must be prohibited in the area or near to extraction systems.

No electrical junction boxes should be allowed in the area where application is carried out.

Airless spray equipment must be earthed (because of the danger of static electricity build-up). Mobile telephones, electrical cameras, and any equipment that is not intrinsically safe, must not be used in the area or near to extraction systems.

8.5 Solvent Vapour and Paint Mists - Protection of Painting Personnel

No ventilation system can reduce solvent vapour levels to below the Occupational Exposure Limit for solvents whilst coating is in operation. Painters should, therefore, wear air fed hoods or pressure fed masks with additional eye protection. (Please note: air fed hoods which provide a curtain of air across the visor are available. These help to prevent settlement of spray mist on the visor). Normal protective clothing must be worn, e.g. overalls, gloves, and suitable footwear of non-spark type.

8.6 Skin Irritation

If proper protective clothing has been worn, e.g. overalls, gloves, air fed hood etc, no discomfort should be experienced from skin irritation. Any small areas not protected by clothing, e.g. wrists or neck, can be treated with a non-greasy barrier cream. (Petroleum jelly is not recommended as this can assist the transport of solvents into the skin).

Any areas of skin accidentally contaminated with paint must be thoroughly washed with soap and water. A skin conditioner that is designed to replace the natural oils in the skin can be used.

Note

1. The preceding safety information is given for guidance only.
2. It is imperative that, prior to the commencement of any tank coating project, local Regulations regarding Health and Safety be consulted.

Protective Coatings

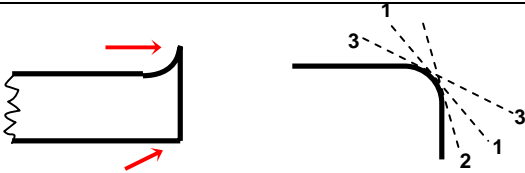
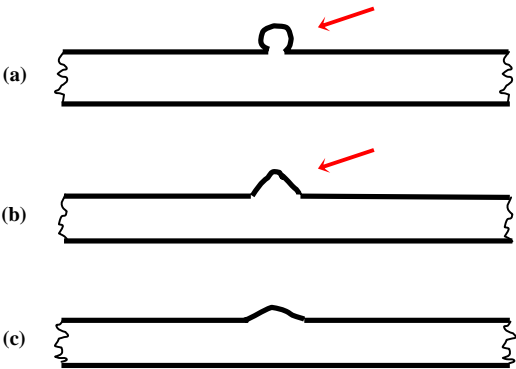
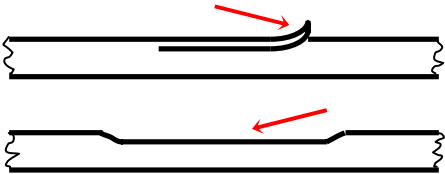
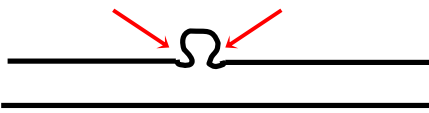

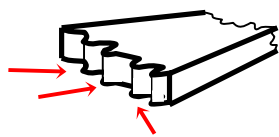
All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

Registered in England No. 63604
Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG



ID 124_UK	Rev. 01	Date 24/11/09	Enviroline® 124	Page 12 of 12
--------------	------------	------------------	------------------------	---------------

APPENDIX – FABRICATION RECTIFICATION

ITEM	PROBLEM/SOLUTION
Sharp Edge	Remove sharp edges or gas cutting edges with grinder or disc sander to achieve a radius of 1.5mm-2.0mm 
Weld Spatter	Remove spatter observed before blasting by grinder, chipping hammer etc. For spatter observed after blasting: Remove with chipping hammer /scraper etc. Where spatter is sharp, use disc sander or grinder until obtuse Obtuse spatter – no treatment required 
Plate Lamination	Any lamination to be removed by grinder or disc sander 
Undercut	Where undercut is to a depth exceeding 1mm and a width smaller than the depth, repair by welding or grinding may be necessary 
Manual Weld	For welding bead with surface irregularity or with excessive sharp edges, remove by disc sander or grinder 
Gas Cut Surface	For surfaces of excessive irregularity, remove by disc sander or grinder 

Protective Coatings

All products supplied and technical advice or recommendations given are subject to our standard Conditions of Sale.

 Registered in England No. 63604
 Registered Office 26th Floor, Portland House, Bressenden Place, London SW1E 5BG
